

# Browning Archery Trance™ Cam Instructions

## Cam Adjustments:

The Browning Archery Trance™ Cam features a patented inner cam system which allows draw length adjustments to be made in 1" increments and let-off to be set at either 65% or 80% without putting the bow in a bow press. The letter "A" engraved on the cam represents the longest draw length setting and the letter "D" represents the shortest draw length possible.

**Inner Cam:** The cam is factory-set at a draw length of 29" (in the "B" setting) as shown in the photo to the right. To change to 30" draw simply remove the screws from the inner cam and move it to the set of holes marked "A" and reinstall the screws. For 28" draw, move the inner cam to the set of holes marked "C". For 27" draw use the "D" setting.

**Draw Stop:** The draw stop must be positioned in the set of holes corresponding to the inner cam. If the set of holes marked "B" are used on the inner cam, the "B" setting must be used for the draw stop. Each set of letters has a 65% and an 80% let off position. The sets of holes are connected by a line engraved on the cam. The "A", "B" and "C" holes are on one side of the cam and the "D" holes are on the opposite side of the cam. The "E" and "F" settings are currently not being used but are for future development. The draw stop always goes to the inside of the cam.

Additional 1/4" adjustments in the draw length may also be made by moving the string to either the "+" post or the "-" post. Moving the string to the "+" increases the draw by 1/4" and to the "-" decreases the draw by 1/4". A bow press must be used to make this adjustment.

Browning Archery  
Tucson, AZ


[www.browning-archery.com](http://www.browning-archery.com)  
BROWNING TRADEMARKS LICENSED FROM BROWNING



Inner Cam



Draw Stop

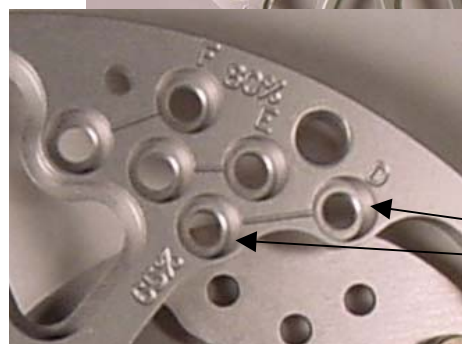

1/4" posts

"D" setting 80%  
"D" setting 65%